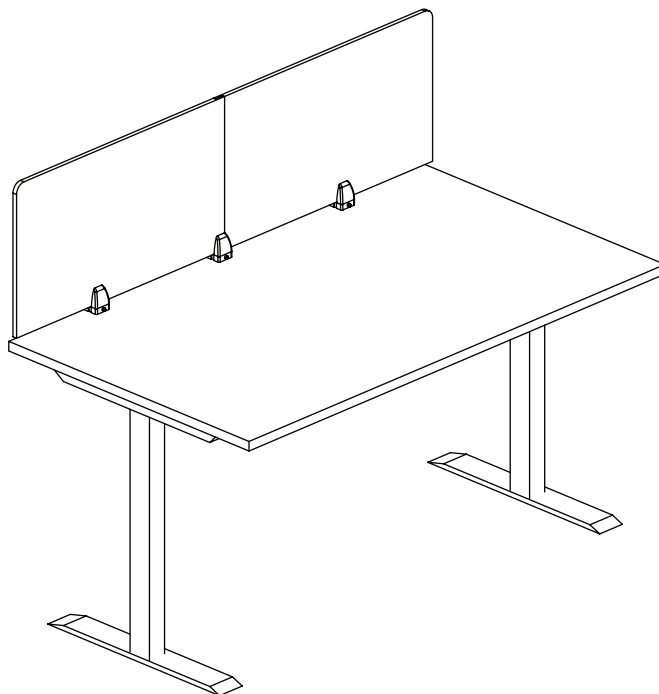




ASSEMBLY INSTRUCTIONS

DESK SCREEN**INSTALLATION HARDWARE****UNDER SURFACE MOUNT
SCREEN BRACKET**

QUANTITY: 3U | PJ-4

**SURFACE MOUNT SCREEN BRACKET**

QUANTITY: 3U | PJ-3

**SCREEN**

QUANTITY: 1U

*Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order

RECOMMENDED TOOLS

Roller - Drill - Allen Key Set

Thank you for your order!



For questions or concerns regarding your order or installation, please contact customer service via email at customercare@ezobord.co.uk, or call us at 01843 666111 (International +44 1843 666111).

Visit our website at shop.ezobord.com/uk

ASSEMBLY INSTRUCTIONS

DESK SCREEN


- 1** Peel off the ezotape cover and join the 2 halves

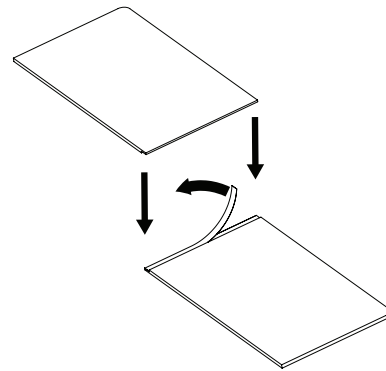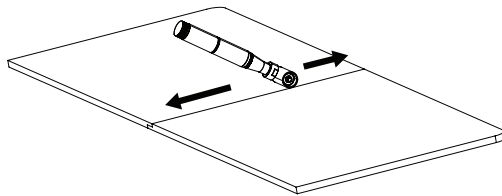

- 2** Firmly burnish panels with roller to ensure proper adhesion.

- 3** Measure out mounting locations
(midpoint on sides; inset 12" from edge)

**If the model requires 3 clamps,
mount one clamp where the joint is.*

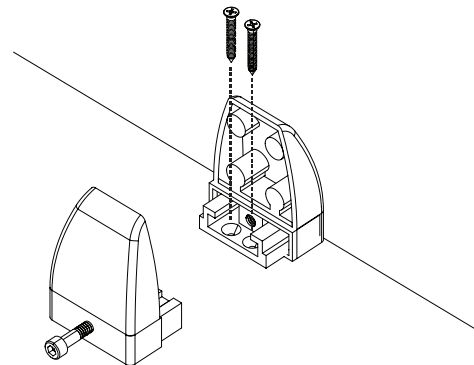

Thank you for your order!

For questions or concerns regarding your order or installation, please contact customer service via email at customercare@ezobord.co.uk, or call us at 01843 666111 (International +44 1843 666111).

Visit our website at shop.ezobord.com/uk

ASSEMBLY INSTRUCTIONS


DESK SCREEN

- 4 Separate 2 sides of bracket and mount to worksurface using substrate appropriate hardware (not included)

**Under mount screen bracket mounts below worksurface*

- 5 Replace second side of bracket with gaskets in place and attach loosely with machine screws

- 6 Place desk screen between two sides of bracket and tighten machine screw into bracket

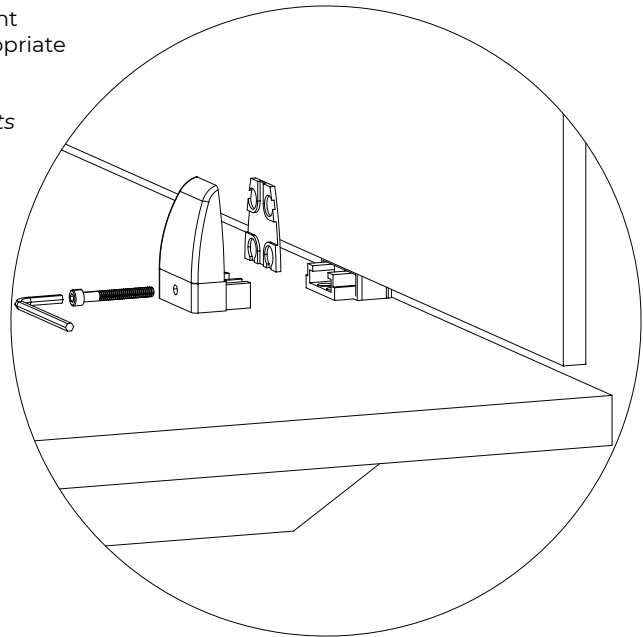

Thank you for your order!

For questions or concerns regarding your order or installation, please contact customer service via email at customercare@ezobord.co.uk, or call us at 01843 666111 (International +44 1843 666111).

Visit our website at shop.ezobord.com/uk