


TEPEE MOBILE SCREEN

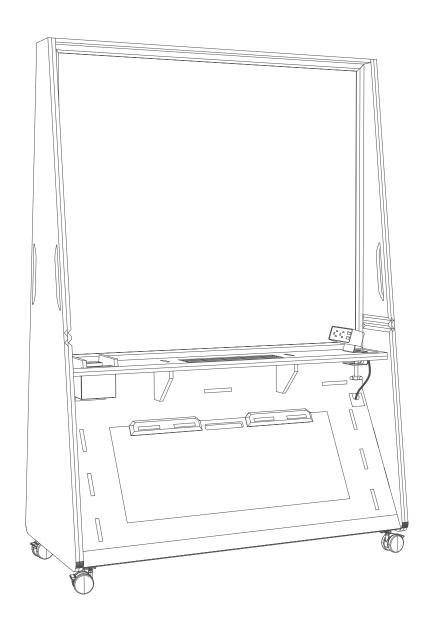


Thank you for your order!

^{*}Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order



TEPEE MOBILE SCREEN

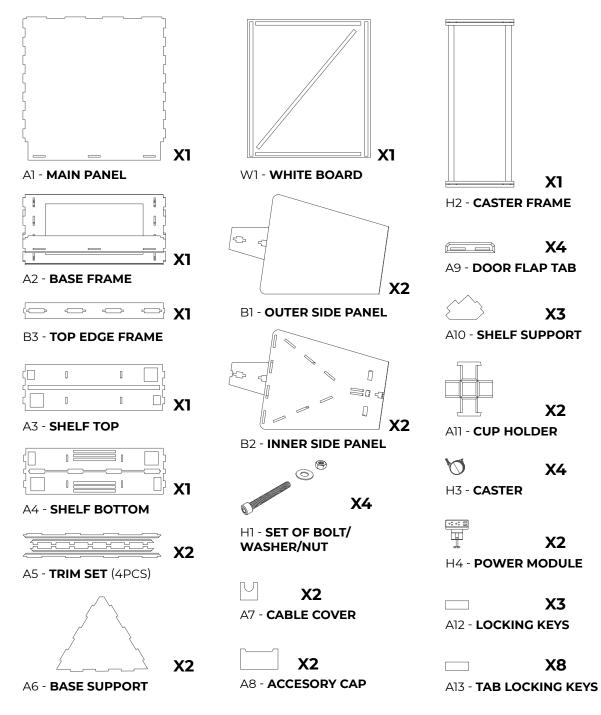


^{*}Images reflect typical hardware options. Please refer to packing list for items & quantities specific to your order


Thank you for your order!



TEPEE MOBILE SCREEN

1 Unfold the BASE FRAME (A2).

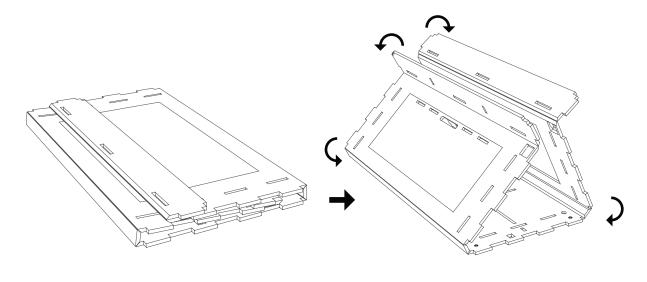

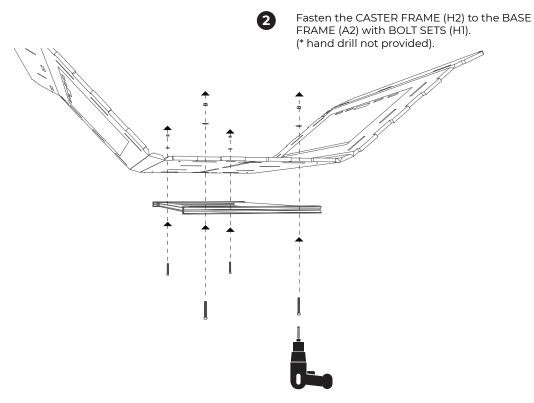



Thank you for your order!



TEPEE MOBILE SCREEN

3 Use a wrench to tighten the CASTERS (H3) to the CASTER FRAME (H2). (*wrench not provided)

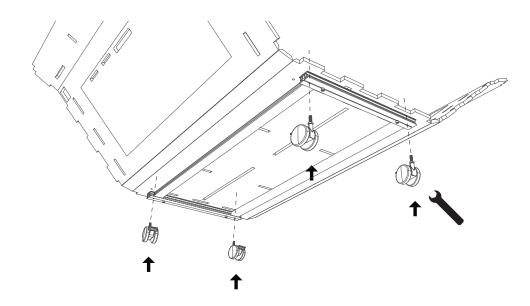

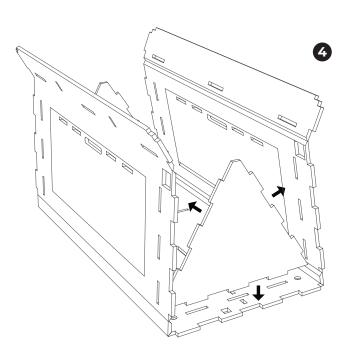


Insert the BASE SUPPORT (A6) into each end of the BASE FRAME (A2), to complete the BASE SUBASSEMBLY.

Thank you for your order!




TEPEE MOBILE SCREEN

Slide the MAIN PANEL (AI) into the slots in the center of the SHELF TOP (A3) and the SHELF BOTTOM (A4), then insert the remainder of the main panel between the two halves of the BASE FRAME (A2).

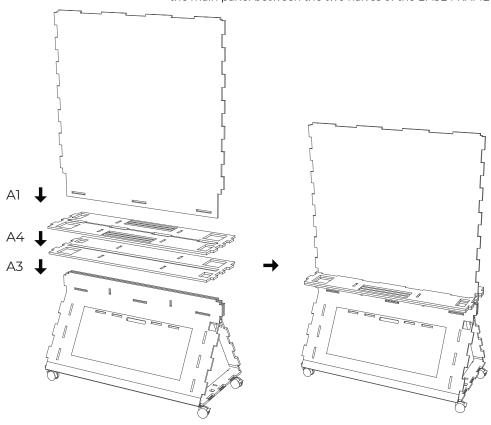

Insert the LOCKING KEYS (A12) into the aligned slots of the BASE SUBASSEMBLY.

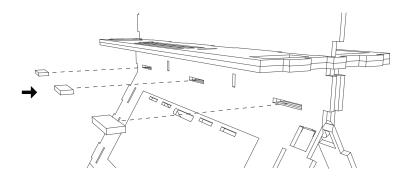


Thank you for your order!




TEPEE MOBILE SCREEN

Unfold the OUTER SIDE PANELS (B1) and the INNER SIDE PANELS (B2).

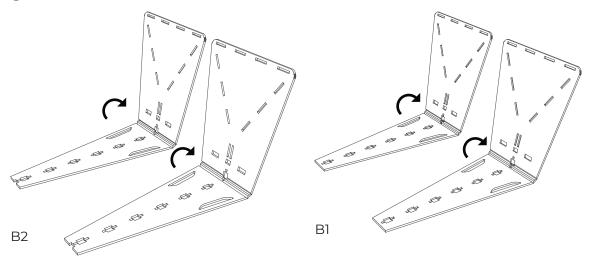

Insert the tabs on the main structure into the corresponding holes on the INNER SIDE PANELS (B1) and the OUTER SIDE PANELS (B2).

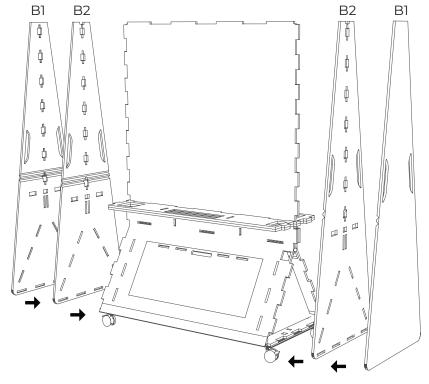


Thank you for your order!




TEPEE MOBILE SCREEN

9 Press the TOP EDGE FRAME (B3) onto the tabs of the MAIN PANEL (A1) on the top. Insert the end tabs of the TOP EDGE FRAME (B3) into the notch of the INNER SIDE PANEL (B2).,

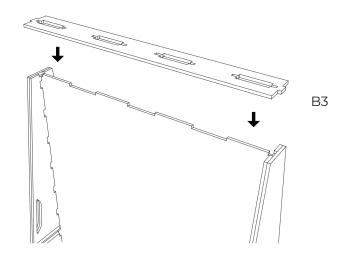

Insert the SUPPORTING BRACKETS (A10) into the slots beneath the SHELF on either side of the mobile screen.

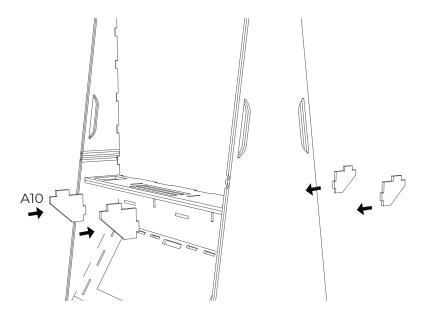


Thank you for your order!




TEPEE MOBILE SCREEN

Peel the cover off the tape on the WHITE BOARD (W1).

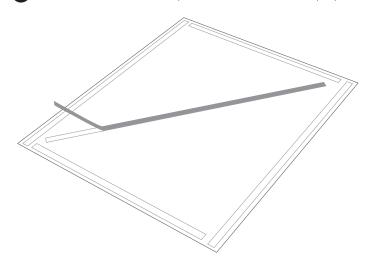

Carefully apply the WHITE BOARD (WI) to the center of the MAIN PANEL (AI).

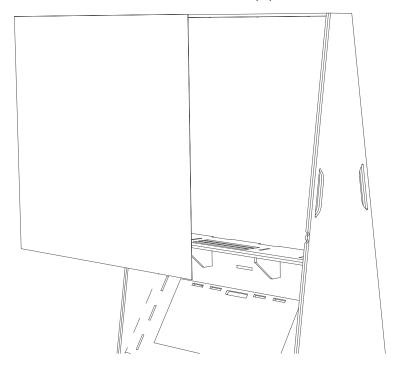


Thank you for your order!




TEPEE MOBILE SCREEN




Cover the edge of the WHITE BOARD (W1) with the TRIM SET (A5), inserting the tabs of the TRIM SET into the slots around the the WHITE BOARD (W1) on the SIDE PANELS.

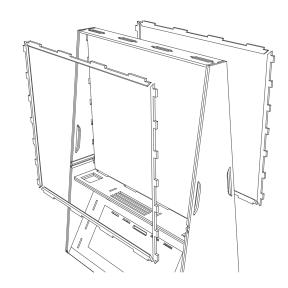

Fold up the 4 sides of the CUP HOLDER (All), and insert it into the square cavity of the SHELF.





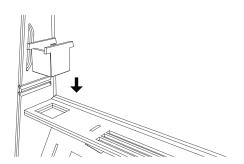



Thank you for your order!





TEPEE MOBILE SCREEN

Install the POWER MODULE (H4) into the rectangular hole in the SHELF, and use the ACCESSORY CAP (A8) to fill the remaining hole.

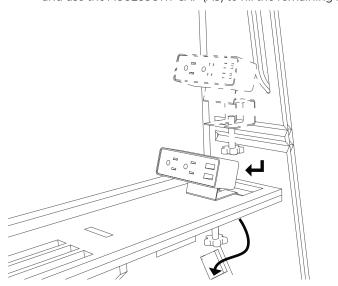

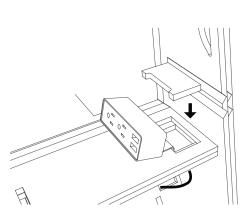

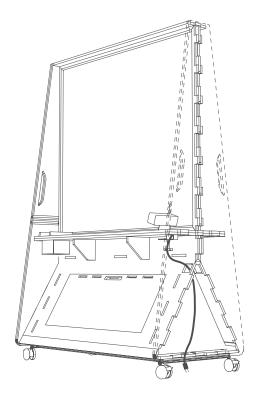




Thank you for your order!



TEPEE MOBILE SCREEN

Insert the TAB LOCKING KEYS (A13) through the aligned slots in the DOOR FLAP TABs (A9) and door flap on the BASE FRAME (A2).

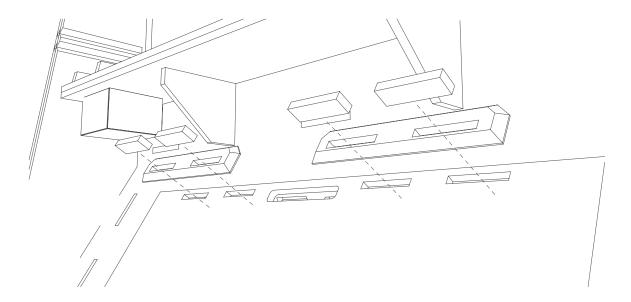

Thank you for your order!